


DETERMOKET pH 7

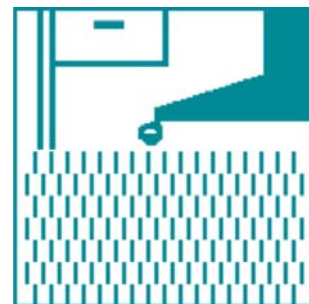

LOW FOAM DETERGENT FOR WOOL CARPETS (INJECTION-EXTRACTION)

GENERAL DESCRIPTION

Special formula at pH 7.5 for carpet wool cleaning with injection - extraction machines.

Not to be used for jute wool carpet backing.

DIRECTION FOR USE

Use **DETERMOKET pH 7** diluted at 10% with the injection extraction machine and warm water.

It is possible also to spray the product diluted at 10-15% directly on the carpet, in particular on the stains and to wash with the machine containing only warm water or a solution of **DETERMOKET pH 7** diluted at 1-2%.

Localized stains can be pre-spotted with the undiluted product, then soaked with warm water and removed by suction. For the bonnet system, use **DETERMOKET pH 7** at 20%, spray it onto the carpet and onto the bonnet fringes. Use a low speed machine or better a 200 - 300 rpm machine.

DIRECTIONS FOR USE

Appearance	white liquid
pH	7.5 ± 0.2
Density	1.010 g/ml
Active contents	6%

Chemical composition – Reg. (EC) 648/2004

- Non ionic surfactants	conc. < 5%
- Soap	conc. < 5%
perfumes	

The product contains surfactants with primary biodegradability at least 90% and ultimate aerobic biodegradation complying with Reg. (EC) No. 648/2004.

WARNINGS

Some types of woollen or jute-backing carpets may be damaged on contact with water.

It can be useful to test the product in a corner to check the felting or the fading of the carpet. In case of jute- backing carpet, avoid using extraction method because it makes the carpet too wet and shrinkage and staining may occur.

The product is not classified as dangerous.



KEMIKA Spa - Sede operativa e stabilimento
Via G. Di Vittorio 55 - 15076 Ovada (AL) ITALIA
Tel: ++39 (0) 143 80494 – Fax: ++39 (0) 143 823068
info@kemikaspaspa.com - www.kemikagroup.com

